

# INSTALLATION INSTRUCTIONS



EXCLUSIVELY FOR TRUE NORTH DISTRIBUTORS & DEALERS

## TN 120 Surround Extension Installation

The TN20 Surround Extension comes unassembled. To assemble:

1. Lay the horizontal plate and the two vertical plates front side down on a flat soft surface (Fig. 1).
2. Using supplied nuts and bolts, attach the two vertical plates to the larger horizontal plate (Fig. 2).

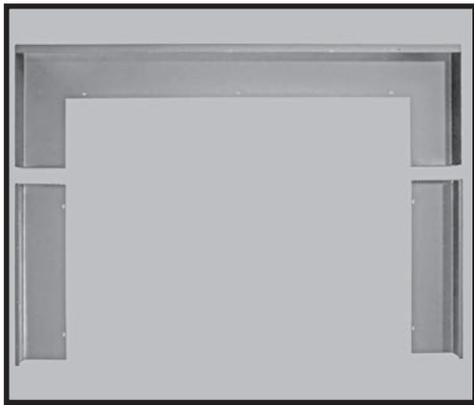


Fig. 1: Outer surround rear side.

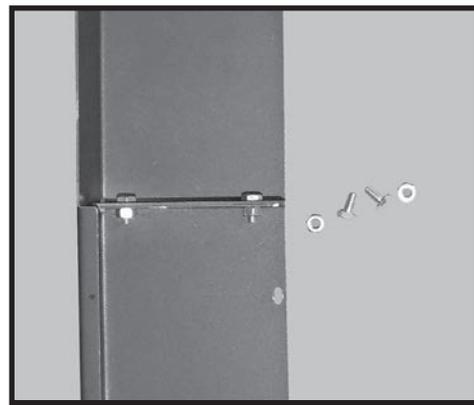


Fig. 2: Outer surround plates attachment points.

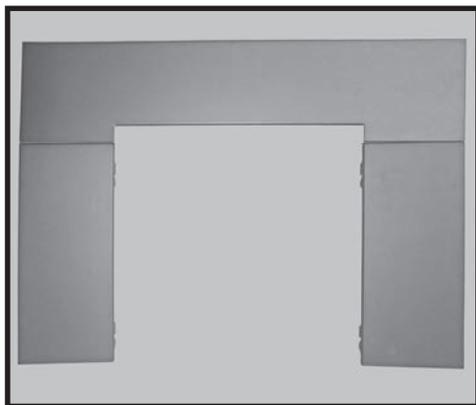


Fig. 3: Inner surround assembled.

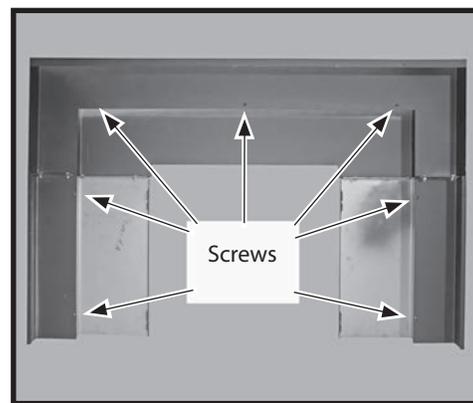


Fig. 4: Completed surround rear side.

3. Remove the smaller regular surround (Fig. 3) from the stove if not already removed, and lay it front side down on a flat soft surface. Be sure to first remove the Blower speed control knob and fixture.
4. Lay the newly assembled larger surround extension face down on top of the regular surround and align the screw holes. Attach the two surrounds using supplied Philips screws (Fig. 4).

5. Once the two surrounds are joined together, mount the surrounds onto the stove by mating the hooks (Fig. 5) built in to the inner sides of the regular surround to the mounting posts on the stove (Fig. 6).
6. Insert the Blower speed control fixture (Fig. 8) into the opening on the right side of the regular surround and afix with screws previously removed.
7. Attach the knob to the Blower speed control post (Fig. 9).

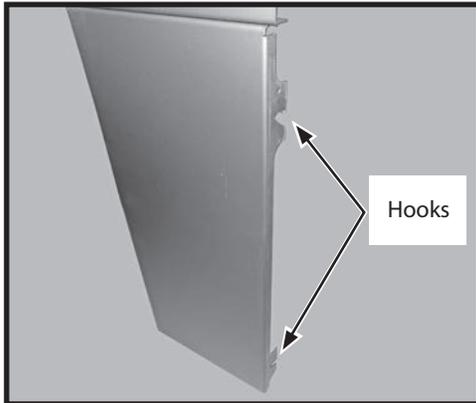


Fig. 5: Inner panel with mounting hooks.

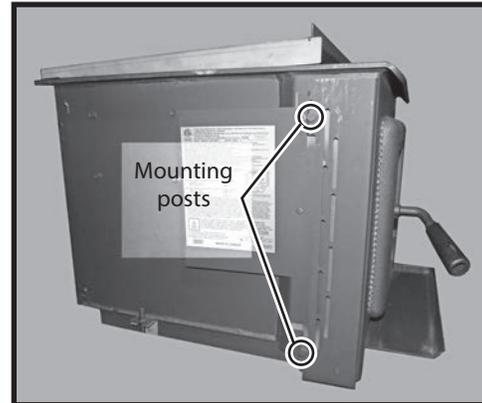


Fig. 6: Mounting side posts for surround.



Fig. 7: Completed surround mounted in place.

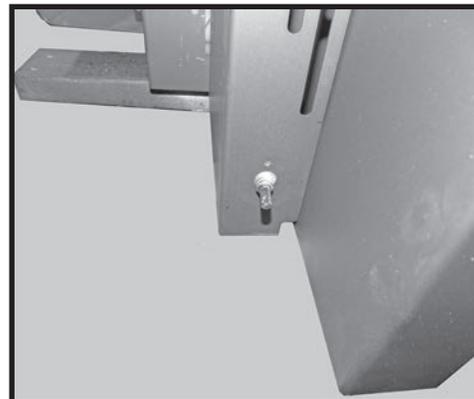


Fig. 8: Blower speed control fixture.



Fig. 9: Blower speed control knob.